

MOTORIZATION INSTALLATION INSTRUCTIONS


THANK YOU FOR PURCHASING OUR DRAPERY HARDWARE. IN ORDER TO MAKE YOUR INSTALLATION EXPERIENCE A GOOD ONE, PLEASE CAREFULLY FOLLOW THESE INSTRUCTIONS.

When your hardware arrives, it will be wrapped in a clear plastic sleeve. If there are multiple rods or spliced rods, they will be wrapped in cellophane wrap to keep them safe from shipping damage. Please empty all contents in the box. Make sure to open the smaller boxes located inside the box as well to ensure all ordered items are present and damage-free. Please note, if you have ordered over-sized rods, your rods will arrive in a shipping tube and your hardware components will arrive in a separate box. If items are missing or damage is present, please contact Brimar immediately at 847-247-0100 or brimar@brimarinc.com.

Carefully remove the cellophane wrap and then the plastic sleeve, exposing the drapery hardware. We recommend setting the hardware flat on the ground with the carriers facing up to complete minor assembly.

If your rods are spliced in the center, please carefully follow steps 1-3 to start. If your rod is not spliced, move to step 5.

Carefully unfold and flip rods without twisting the green motor belt, making sure the belt is still tucked inside the channel of the track. Twisting the belt during installation will cause the treatment to fail and must be avoided at all costs.

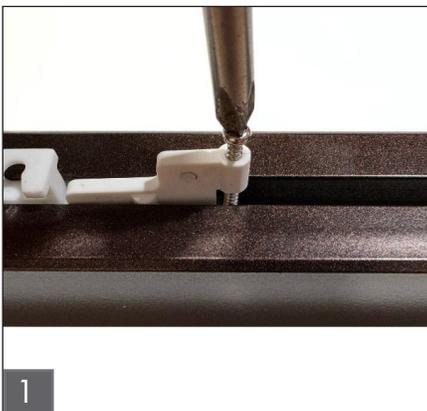

1
Remove the screw on the Master marked with a green dot.



2
Push both sides together and carefully insert screw to connect both sides. Be sure that the screw is inserted straight and connects both the top and bottom portion of the master. If connected crooked, the treatment will not move smoothly.



3
Now that the masters are joined, there should not be a gap in the center of the rod at the point of splice. Gently flip rod over on its side exposing the splice connector.

ASSEMBLE MASTER CARRIERS




Loosen screws of already installed splice connector near the center splice. Slide splice connector over to cover both rods equally and tighten all screws to lock rods into place (center hole is intentionally left open to accommodate a center bracket).

Manually move the masters open and closed to make sure everything is moving smoothly and operating properly. Skipping this step could cause the motor to burn out or strip the internal pulleys.

In order to prevent damage during shipping, the master carrier arms are not assembled.

CONNECT THE MOTOR

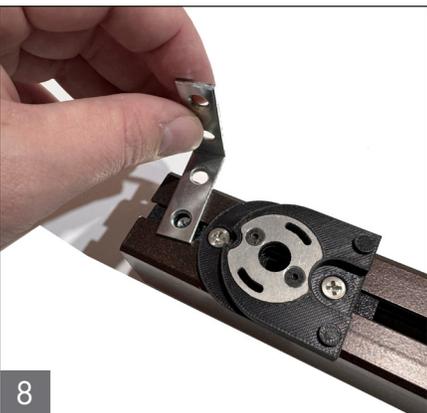


With rod installed in place, open the lever on the motor.



Locate the overlap and underlap arms (in separate bag).



Attach the "L" return bracket to the screw located at the very end of the rod AFTER the motor plate.

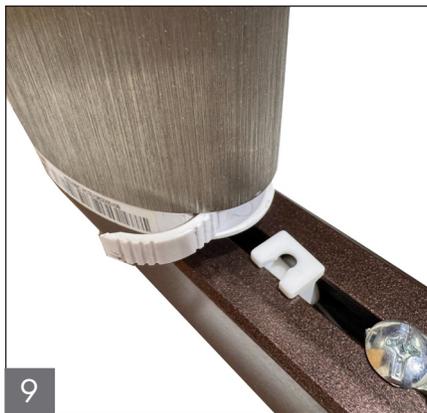

Insert motor into the motor adaptor plate and close the motor lever to lock the motor into place. Make sure the motor is locked in before letting go to prevent damage to the motor and the surrounding area.



Attach the overlap/underlap arms to master carriers with the screws already located in the masters.

We recommend installing the bracket bases to the wall first, then loosely attaching the arms to the top of the rod in order to make slight adjustments. For larger widths, we recommend two people working together to hold and tighten the rod into place.

Plug motor into a power source or make sure battery is fully charged (if battery operated). Once rod is installed and motor is mounted, manually tug the master to start the process of setting the limits. The first time the masters move, they will travel slowly to find the opening and closing points of the rod. After the initial limits have been set, the rod will travel at normal speed. See the enclosed manual for more information on your Somfy motor and remote, or visit www.Somfy.com